ARTFONE C1

1. Receiver
2. LCD
3. Left soft key
- To enter main menu in standby mode
- Confirms the selection
- Activates the selected function (OK)

4. Right soft key:
- In standby mode, assigned with "Contacts" function
- Exit menu or exit current operation
- Other assignments depending on the context

5. Up/down button:
-   Navigation in menu
-   "Up" to shortcut to Messages, "down" shortcut to Multimedia.

6. Green button: Answer/make a call
7. Red button: End a call, Power on/off
8. Numeric keypad
9. Numeric 0 button or long pressing to switch to meeting mode.
10. 3.5mm audio jack
11. Micro USB socket
12. Flashlight LED
13. Lock keypad
14. Unlock keypad
15. Side button to turn on/off flashlight
16. Side button for Volume +/-

Icon description

 Shows actual GSM signal

 Unread message

 Shows normal profile

 Headphones plugged-in

 Alarm is set up

 Enabled Bluetooth

 Battery status

How to power on?

Press the red button for 2.5 seconds.

How to power off?

Make sure the keypad is unlocked, then press the red button for 2.5 seconds.

How to use a flashlight?

Just press the No.15 button on the side to turn on or turn off the flashlight.
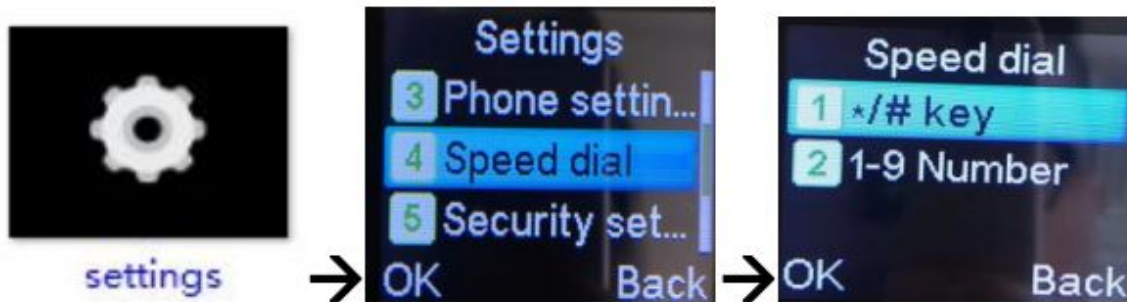
How to use the SOS function?

SOS settings

- Status: Set the function on or off here:
- SOS numbers: This is very important, you can set no more than 5 telephone numbers here. When you press the SOS button, the phone will dial the numbers one by one automatically.
- SOS SMS: You can edit SMS
- SOS SMS ON/OFF: You can turn on or off SOS message

How to make a call?

1. Input a telephone number and press the left green button
2. Find a contact in the phonebook and press the left green button
3. SOS special dial: press the SOS button and the phone will dial pre-set SOS number automatically
4. Speed dial

Speed dial

       If you would like to dial quickly and easily, you can set speed dial numbers as shown above, and also you can turn off this function.

Volume adjustment

       Press the side button + or - to adjust the volume.

How to change ringtone/message tone/volume?

       Go to Settings → Profiles → General→ Customize

Passwords

       Security settings → Phone security → Password is 1234
       Restore factory settings → Password is 1234

FAQ

1. SIM card: supports nano and micro SIM, but it is best to use a standard SIM card.

2. Does this phone work on 3G network?

   No, it is 2G GSM phone, supports quad bands: 850/900/1800/1900

3. Is the phone unlocked?

   Yes,all Artfone phones are unlocked and work well on 2G GSM networks around the world.

4. Does the phone packaging include earphones?

   No, but it has the 3.5mm port, compatible with most earphones on the market.

5. How to use the camera?

   Go to Multimedia and open the Camera. Take photos by pressing number 1.